Sabinet Secounters Sec

Kitchen Planning Guide

Your First Step Toward Making Your Kitchen Dreams Come True!

www.CabinetDiscounters.com



iscounters Kitchen Planning Guide


Start by Measuring Your Kitchen Space:

Cabinet Discounters designers are experts and will create a customized layout incorporating your family's needs and desires, but it must fit your space. Drawing dimensions is easy - all you need is a tape measure, a pencil, and the simple grid on the back of this Guide. Just be sure you get all the measurements written down. Your drawing should look similar to the one below.

Start by measuring the sink window wall first. Begin in the corner. Measure in inches to the edge of the window trim.

Windows & Doors: Mark in width from outside of trim to outside of trim. Fill in full dimensional data at bottom of this page.

Continue... Working clockwise, record all measurements of the room noting any breaks such as doors, offsets, etc/

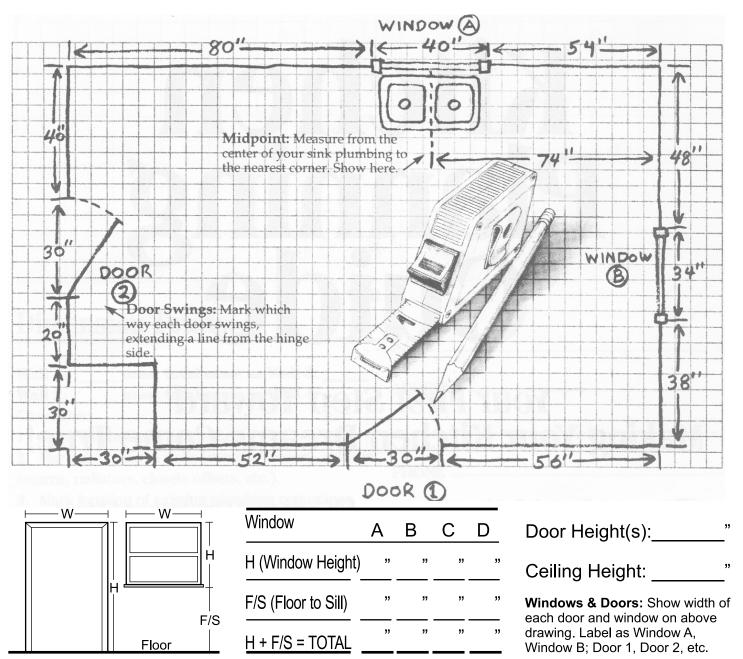

Planning Details


1. This	olan is for: [Remodelin	g 🔲	New Home
2. If you	are remod	eling, are you	addir	ng: 🔲 New subfloo
🔲 Dr	ywall or Pa	neling over pr	esent	wall
3. The a	age of your	house is:	yea	ars.
4. Interi	or kitchen v	valls are: 🔲 🗅	rywal	I □ Plaster
☐ Blo	ock 🔲 Brid	k		
5. Exter	ior walls ar	e: 🔲 Wood [☐ Per	manent Siding
🔲 Blo	ock 🔲 Brid	k 🔲 Stucco		
6. Kitch	en floor cor	nstruction und	ler the	vinyl flooring,
carpe	et or tile: 🔲	Wood 🔲 Co	ncrete	Э
7. If you	have soffit	s, height from	floor	to soffit is
soffit	depth is	,,		
8. Kitch	en table no	rmally seats _		persons.
9. Dime	nsions of e	xisting table a	are	" wide
by	" long;	or if round		" diameter

Options Planning

Which of these Options would you like to see included in your new kitchen if space permits.


Appliance garage with handsome tambor doors
☐ Built-in wine rack to add real beauty
Chef's pantry with huge storage capacity
☐ Tall utility cabinet with roll-out drawers
Range hood housed in matching wood cabinet
☐ Microwave cabinet for eye level convenience
☐ Decorative book case to display your treasures
Corner cabinets with swing-out shelves
Lazy Susan units in wall or base cabinets
☐ Tray cabinet to provide divided storage space
☐ Roll-out shelves to add real convenience
Spice rack to multiply utility space
Built-in trash basket in base cabinet
Cutlery drawer, chopping block and bread box contained in a single handy base cabinet unit
☐ Stained glass doors to add real beauty
☐ Sink tilt-out drawer to utilize normally wasted space
☐ Sliding towel rack on the back of the sink door
☐ Swing-out cook book rack underneath wall cabinet

☐ Whatnot shelves to add dimension and beauty

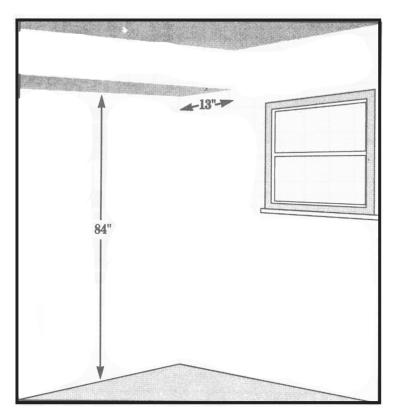


Soffits: A soffit is the bulkhead between the ceiling and the top of the cabinets. Distance from floor to soffit should be at least 84". Allow another ½" if you install an 84" cabinet. Depth may vary - normal is 13" which is 1" deeper than a wall cabinet.

Many designers do not use soffits. In some cases and extra high 42" wall cabinet is used. In others, the space above the wall cabinets is left open.

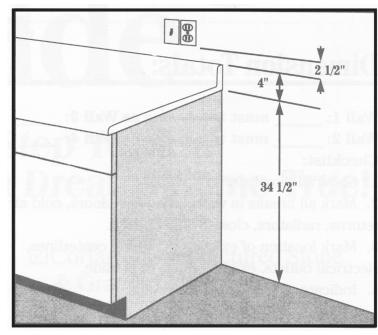

Base Clearance: You need 41" below the windows and electrical outlets to fin in new base cabinets and a counter top with backsplash. This leaves 2½" clearance above the counter top. If you have less than 1" clearance, be sure to notify your designer.

Wall 1

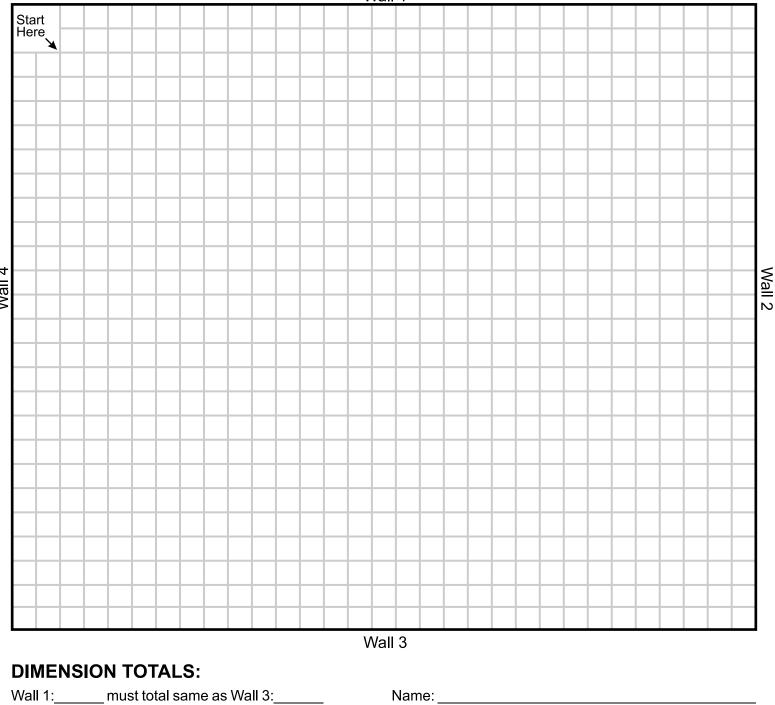

Wall 1: must total same as Wall 3:	Name:
Wall 2: must total same as Wall 4:	
Checklist:	Address:
1. Show all dimensions in inches.	
2. Mark all breaks in walls (windows, doors, cold air	
returns, radiators, closets, offsets, etc.)	
3. Mark location of existing plumbing centerlines,	Phones:
electrical outlets, existing ducts to outside.	
4. Indicate which are exterior walls.	email:

